
 


REV. 1
12/17/14

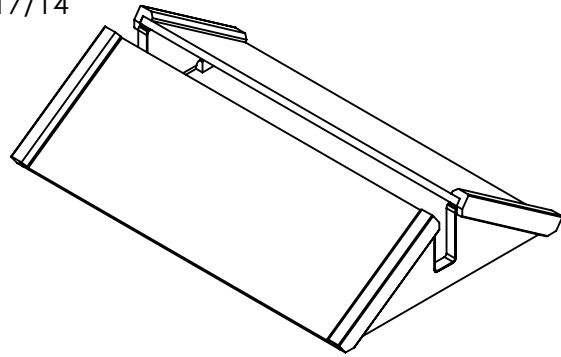


**EXTERIOR DOOR DISPLAY (NON ROTATING)
WITH CENTERLINE STICKER
QTY: 1**

**HARDWARE BAG:
[1] PACKING LIST/INSTRUCTIONS**



**PLASTIC SHIM
QTY: 4**

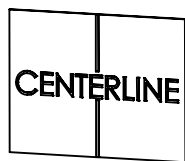

**CENTERLINE
TEMPORARY
STICKER
QTY: 1**

QUALITY CONTROL:

INSPECTED BY: _____ DATE: _____
INSPECTED BY: _____ DATE: _____

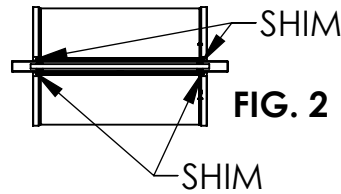


FIG. 2

STEP 1

USE TAPE MEASURE TO FIND THE CENTER OF THE DOOR ALONG THE BOTTOM AND PLACE TEMPORARY STICKER PROVIDED. SEE FIG. 1

STEP 2

ALIGN STICKER ON DOOR WITH STICKER ON BASE OF THE DISPLAY AND SLIDE DOOR INTO BASE ASSY. REMOVE STICKER FROM THE DISPLAY.

STEP 3

IF DOOR IS LOOSE IN BASE ASSY, PUSH [4] PLASTIC SHIMS IN PLACE BY HAND. SEE FIG. 2



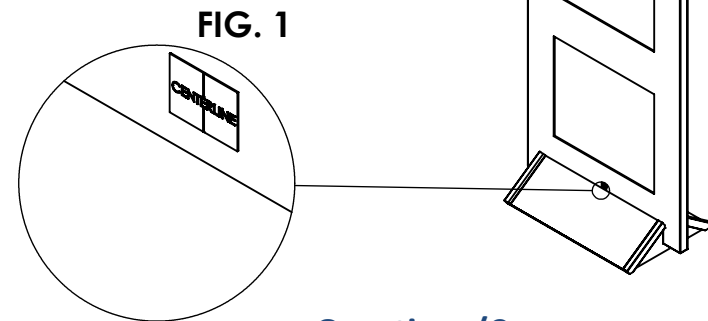


FIG. 1

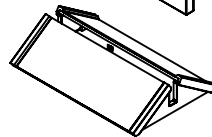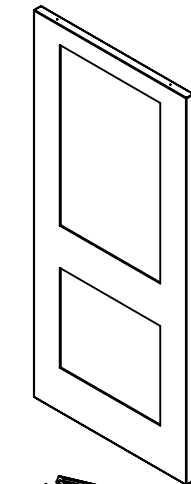

**PACKING LIST/INSTRUCTIONS
FOR SINGLE EXTERIOR
DOOR DISPLAY-
NON ROTATING NO HEADER**

Questions/Concerns
Please contact JELD-WEN
Visual Merchandising
1-888-535-3936
visualmerchandising@jeld-wen.com