
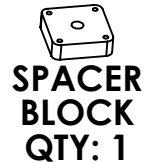
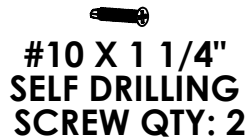


PACKLIST/INSTRUCTIONS FOR KD ROTATING DISPLAY KIT

KIT TO MAKE DISPLAY WINDOW ROTATE

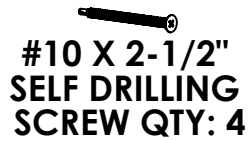

TOOLS NEEDED: PHILLIPS SCREWDRIVER

DISPLAY, WINDOW AND GRAPHICS SHIP SEPARATELY FROM THIS KIT

STEP 1


ASSEMBLE DISPLAY AS SHOWN IN PACKLIST INSTRUCTIONS SHIPPED WITH DISPLAY MAKING SURE BOTTOM BRACE IS INSTALLED INTO LOWER HOLES ON UPRIGHTS.

STEP 2:

FOR ROTATING DISPLAY SEE DETAIL BELOW. ATTACH ROTATE WELDMENT TO KD LOWER SUPPORT BAR USING [2] #10 X 1 1/4" SCREWS. PLACE SPACER BLOCK INSIDE ROTATE WELDMENT PART. PLACE HOME BLOCK ON TOP OF SPACER AND SECURE USING [4] #10 X 2 1/2" SCREWS. ATTACH MALE BLOCK TO UNDERSIDE OF WINDOW WITH #8 X 1-1/2" PH SCREWS. SLIDE BUCK ASSEMBLY UP INTO TOP PIN AND THEN DOWN ON TO BOTTOM PIN.

STEP 3:

USE THE [4] BLACK HOLE PLUGS TO PLUG THE HOLES ON THE INSIDE OF THE TOP HORIZONTAL TUBE AND THE TOP OF THE CENTER HORIZONTAL TUBE.

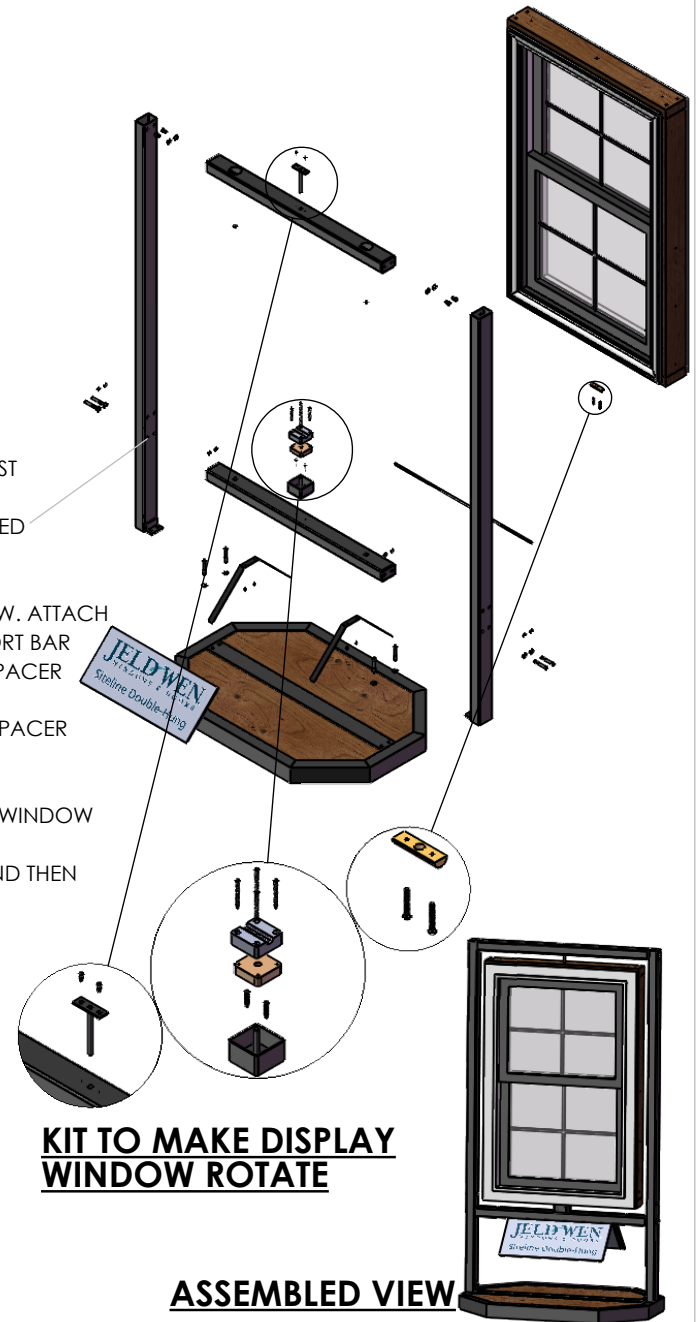

REV. 2
3/15/18

JW **JELD-WEN**
WINDOWS & DOORS