


INTERIOR ROTATING BASE DISPLAY WITH CENTERLINE STICKER QTY: 1



PACKING LIST/INSTRUCTIONS
FOR ROTATING SINGLE INTERIOR
DOOR DISPLAY NO HEADER

STEP1

USE TAPE MEASURE TO FIND THE CENTER OF THE DOOR ALONG THE BOTTOM AND PLACE TEMPORARY STICKER PROVIDED. SEE FIG. 1

STEP 2

ALIGN STICKER ON DOOR WITH STICKER ON BASE OF THE DISPLAY AND SLIDE DOOR INTO BASE ASSY. REMOVE STICKER FROM THE DISPLAY.

STEP 3

IF DOOR IS LOOSE IN BASE ASSY, PUSH [4] PLASTIC SHIMS IN PLACE BY HAND. SEE FIG. 2

HARDWARE BAG: [1] PACKING LIST/INSTRUCTIONS




CENTERLINE TEMPORARY STICKER QTY: 1




PLASTIC SHIM QTY: 4

QUALITY CONTROL:

INSPECTED BY: DATE: DATE:

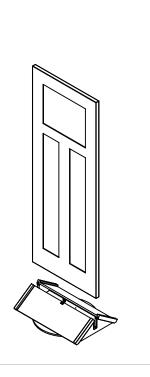

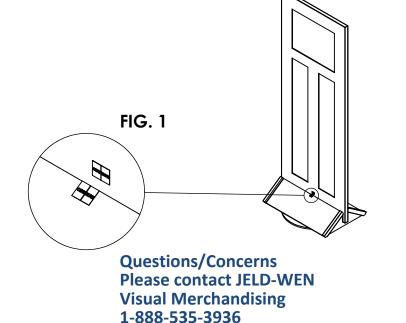

visualmerchandising@jeld-wen.com